

Lilliput BM280-4K User Manual





VDH Video Data Handels GmbH Kohlentwiete 14 22761 Hamburg

www.videodata.de





IMPORTANT SAFETY INSTRUCTIONS

- Please read User Guide before using this product.
- Please keep User Guide for future reference.
- Please read the cautions to prevent possible danger and loss of property.

FEATURES

4K Ultra-HD resolution



Ultra HD 4K screens containing 8.3 million pixel (3840×2160),

so the resolution is four times that of Full HD. Which makes the innovative 4K screen ultimate in cinematic displays.



Big unit, large view

It features 28" 16:9 LED display, 170° wide viewing angles,

enjoy Consistent Images from Any Perspective. Strongly recommend for directors!



Precise color

1000:1 high contrast, 450cd/m2 brightness, so you can enjoy sharper, more detailed images and richer colors than ever before.



Carry-on suitcase

The suitcase improves the monitor robustness & portability, also speeds up heat radiating. It makes monitor more stable and reliable.

Specially suitable for live shooting and post production.





Metal housing

A good protection from damage with all aluminum main body, to extend the life time of your monitor.



Rich interfaces

The monitor comes with 3G-SDI, HDMI, VGA, DVI & Audio interfaces. Multiple inputs meet the best need of various professional display solutions.

CAUTIONS

- Please do not place the display screen towards the ground.
- Please avoid heavy impact or drop onto the ground.
- Please do NOT use chemical solutions to clean this product. Please wipe with a clean soft cloth to maintain the brightness of the surface.
- Please do not block any vent hole.
- Please follow the instructions and trouble-shootings to adjust the product. Other improper adjustment may result in damage. Any further adjustment must be performed or conducted by a qualified technician.
- ➤ Please unplug the power and remove the battery if long-term no-use, or thunder weather.


Contents

1. PRODUCT DESCRIPTION	4
2. SUN SHADE INSTALLATION	7
3. MENU SETTING	8
4. ACCESSORIES	11
5. PARAMETERS	8
6. TROUBLE SHOOTING	g



1. PRODUCT DESCRIPTION

Front

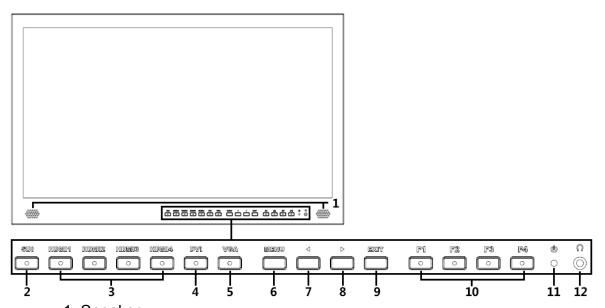

- 1. Speaker
- 2. SDI

Signal switch to SDI mode when light on.

3. HDMI 1 ~ 4

Signal switch to HDMI mode when light on.

4. DVI

Signal switch to DVI mode when light on.

5. VGA

Signal switch to VGA mode when light on.

6. MENU/ENTER

Press to enter menu.

Press to enter option in the menu.

7. ◀

Select option in the menu.

Decrease the option value.

Before enter the menu, single press to activate volume, press again to switch among of volume, brightness, contrast, color, hue, sharpness and backlight.

8. ▶

Select option in the menu.

Increase the option value.

9. EXIT

Back or exit.

10. F1~F4 User definable buttons

Default function options:

F1 : Display Mode F2 : Display Rotate

F3 : Safety Marker F4 : Aspect




(functions can be customized by long keep pressing any one of the 4

buttons)

- 11 . Power indicating light (green light: working).
- 12 . Earphone jack

Back

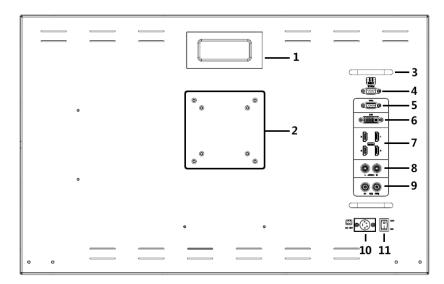

- 1. Handle
- 2. VESA 75×75 & VESA 100×100 mounting port
- Connector protector
 Preventing connectors from damage.
- 4. TALLY port
- 5. VGA input port
- 6. DVI input port
- 7. HDMI input port×4。

HDMI 1: HDMI2.0, support 4K 60Hz

HDMI 2, HDMI 3&HDMI 4: HDMI1.4, support 4K 30Hz


- 8. Audio L/R
- 9. SDI input/output ports
- 10. XLR power port
- 11. Power switch

Il is battery power; ○ is power off; | is DC power




2. SUN SHADE INSTALLATION

1. Put the sun shade on the suitcase, and match the magnets on both sides.

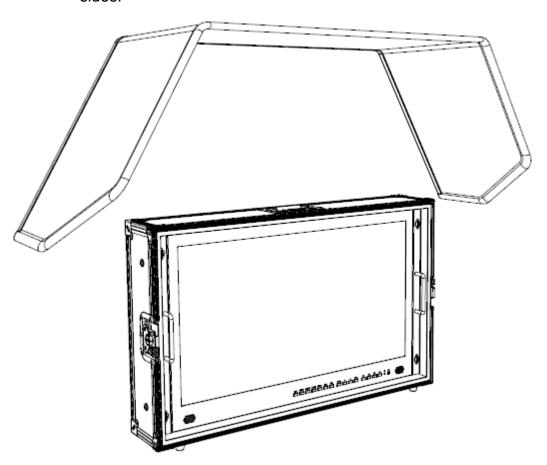

2. As shown below after finished.

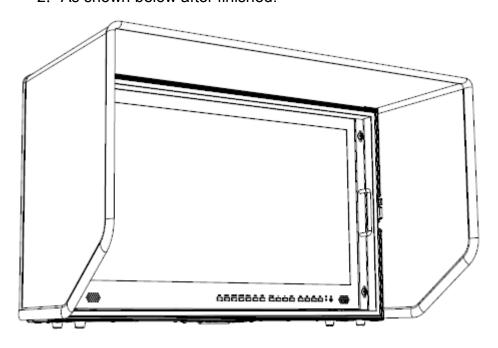



3. MENU SETTING

Please check whether the device is connected well or not.

3-1. F1~F4 user definable shortcut buttons

Long keep pressing any one of the 4 buttons for 3-5 seconds to activate shortcut menu setting. Option selected will be highlighted as white; option will be highlighted as yellow, unavailable option will be highlighted as gray.

Select option via "◄/▶" buttons.

Then press "MENU" button to confirm to set as default option.

Functions can be customized to meet user's needs: center marker, safety marker, aspect ratio, under scan, check field, image freeze, peaking, display mode and image flip.

Default options:

F1 : Display Mode F2 : Display Rotate

F3: Safety Marker F4: Aspect

3-2. ◄ / **▶** Buttons Operation

Under non menu screen, press **◄/▶** buttons to activate volume bar, Use " **◄** / **▶**"buttons to select the desired option.

Press the "MENU" button to select Volume, Brightness, Contrast, Saturation, Hue, Sharpness, Backlight, Menu and Exit.

3-3. MENU Operation

When power on, press "MENU" on the device, The menu of function setting will display on the screen.

Press ◀ / ▶ button to choose menu;

Then press "MENU" button to confirm;

Press "EXIT" button to return / exit menu.

Picture	Brightness	0~100
	Contrast	0~100
Ficture	Color Space	Native / REC709
	Saturation	0~100

		4.5	
DIV	leo	aa	τσ

	Hue	0~100		
	Sharpness 0~4			
	Temperature	9300 , 7500 , 6500 , 5	800 , Use	r
	Backlight	0~100		
	Center Marker	ON, OFF		
\Function	Safety Marker	OFF , 95% , 93% , 90% , 88% , 85% , 80%		85% , 80%
	Aspect Marker	Full Screen , 17:9, 16:9 , 4:3 , 1.85:1 , 2.35:		85:1 , 2.35:1
	Aspect	Full Screen , 17:9, 16:9 , 4:3 , 1.85:1 , 2.35:1		85:1 , 2.35:1
	Underscan	ON, OFF		
	Pixel-to-Pixel	ON, OFF		
	Check Filed	OFF, Red, Green, Blue	!	
	Freeze Input	ON, OFF		
	False Color	ON, OFF		
	Peaking	ON, OFF		
Display Mode	1P , 2P LR , 2P TB , 2P PIP , 4P			
	Display Rotate	0°, 90°, 180°, 270°	Available display.	when single
Display Setting	LR Ratio	0~4	Available	when dual
	Input Swap		display right.	on left and
Select Region	Menu setting to reg	ion selected according to	users' nee	ds.
Input	Signal switch to reg	ion selected according to	users' nee	ds.
	Volume	0~100		
Audio	Audio Source	Analog , Digital 1 , Digital 2 , Digital 3 , Digital 4。		
	Auto Adjust	Press to confirm after se	lected.	Only for
	H Position	0~100		adjusting
VGA	V Position	0~100		VGA
	Clock	0~100		signal
	Phase	0~100		modes.
	Reset	Press to confirm after selected.		
	Menu Time	5~60s		
	OSD H Position	0~100 (To set menu display area)		
	OSD V Position	0~100 (To set menu display area)		
System	Transparency	0~255 (To set menu transparency)		
	OSD Rotate	0°, 90°, 270°		
	Border Width	0~10		
	Border Color	R, G, B, W		
Info	To display current in	o display current information.		



4, ACCESSORIES

1. Folding sun shade cover 1 piece 2. Carry-on suitcase 1 piece 3. 15V DC adapter 1 piece 4. Adapter fixing belt 2 pieces 5. Battery plate bracket 1 piece 6. V-mount or Anton bauer mount 1 piece 7. TALLY connector (in bulk) 1 piece 1 сору 8. Manual 9. WHDI Accessories 1 pair (optional)

5、PARAMETERS

Panel	28"LED backlight
Resolution	3840×2160
Aspect Ratio	16:9
Brightness	300cd/m ²
Contrast	1000: 1
Viewing Angle	170°/ 160°(H/V)
Input Voltage	DC 12~24V (XLR)
Input Signal	HDMI, VGA , DVI and 3G-SDI
Power Consumption	≤ 48W
Operating Temperature	-0°C~60°C
Storage Temperature	-20°C~60°C
Dimension (LWD)	670×425×45mm
	761×474×173mm (with case)
Weight	9.4kg/21kg (with case)



6 TROUBLE SHOOTING

- Only black-and-white display.
 Check whether the color saturation is properly setup or not.
- 2. Power on but no pictures.

Check whether the cables of HDMI, VGA, DVI and 3G-SDI are correctly connected or not. Please use the standard power adapter coming with the product package. Improper power input may cause damage.

- 3. Wrong or abnormal colors.
 - Check whether the cables are correctly and properly connected or not. Broken or loose pins of the cables may cause a bad connection.
- 4. When on the picture shows size error.
 - Press "MENU \rightarrow Function \rightarrow Underscan" to zoom in/out pictures automatically when receiving HDMI signals
- 5. Other problems.
 - Please press "MENU" button and choose "MENU→ System→ Reset →confirm"
- 6. According to the ISP, the machine cannot function properly. ISP for program upgrades, non-professionals do not use. Please reboot your device if press accidentally!
- 7. No Sound.
 - Press HDMI button if no sound; if still unavailable, please contact the technician.
- No signal displayed when connecting with HDMI 1
 Please long press HDMI 1 button for 3-5 seconds to activate HDMI signal.

Note: due to constant effort to improve products and product features, specifications may change without notice.